


RDI PALAY DISPLAY

STORE FIXTURES & SUPPLIES SINCE 1945

Greeting Card Display

1. Position unswaged base tube with projections (detail 3) near the top end. Using a twisting motion, press opposite end into 4-leg base. *Use correct tube.

2. Slide metal washer, then bearing washer, then (1) slotted washer down the base tube to rest on projections.

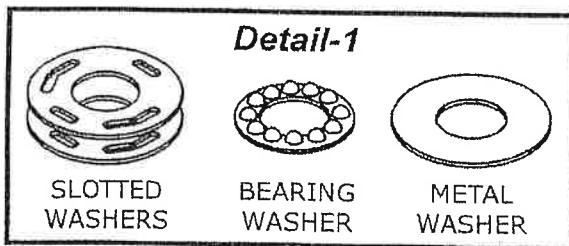

3. Insert swaged end of top tube into base tube. Press until firmly seated.

4. Slide remaining slotted washer down top tube to rest on projections.

5. Align slots of both washers then attach wing hooks into them. Attach wings in order shown in detail 2.

