

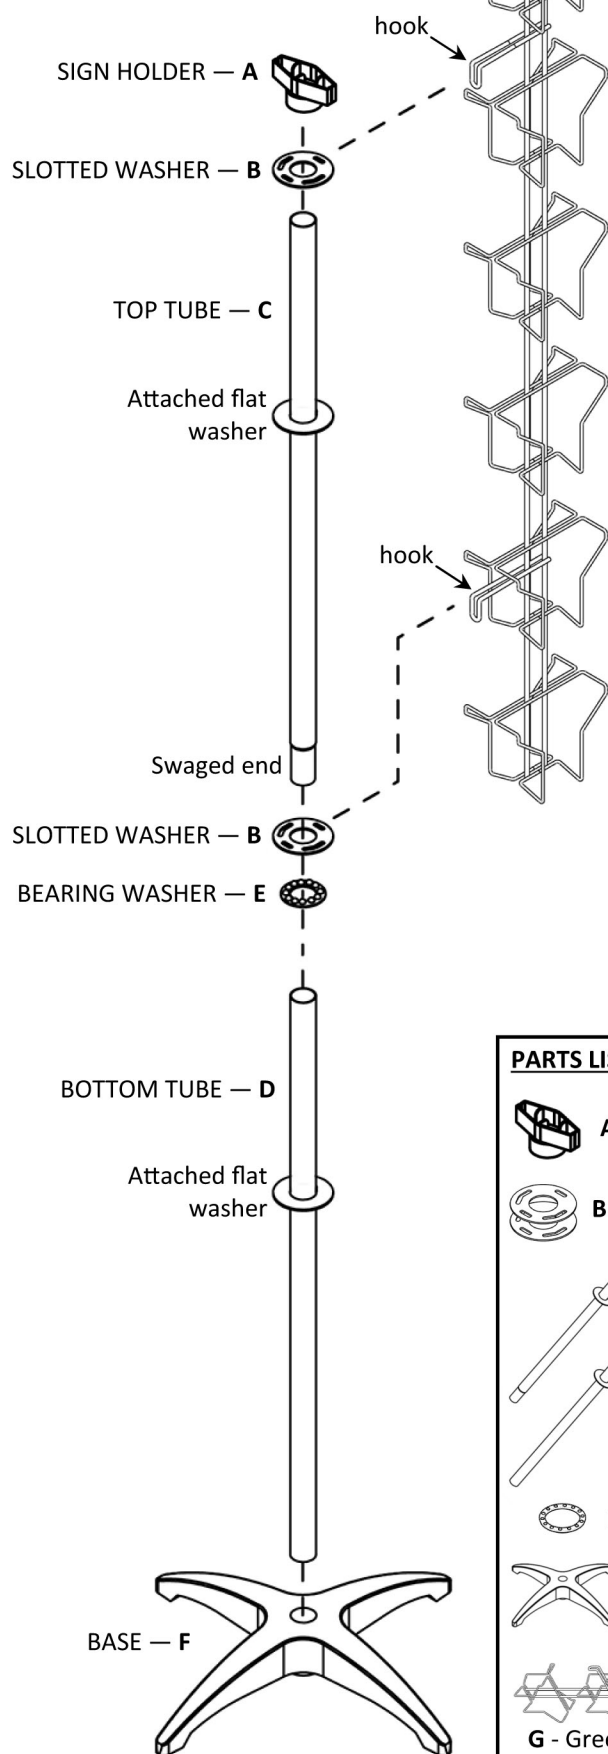


REETING CARD WING — **G**  
(greeting card pocket configuration may vary)

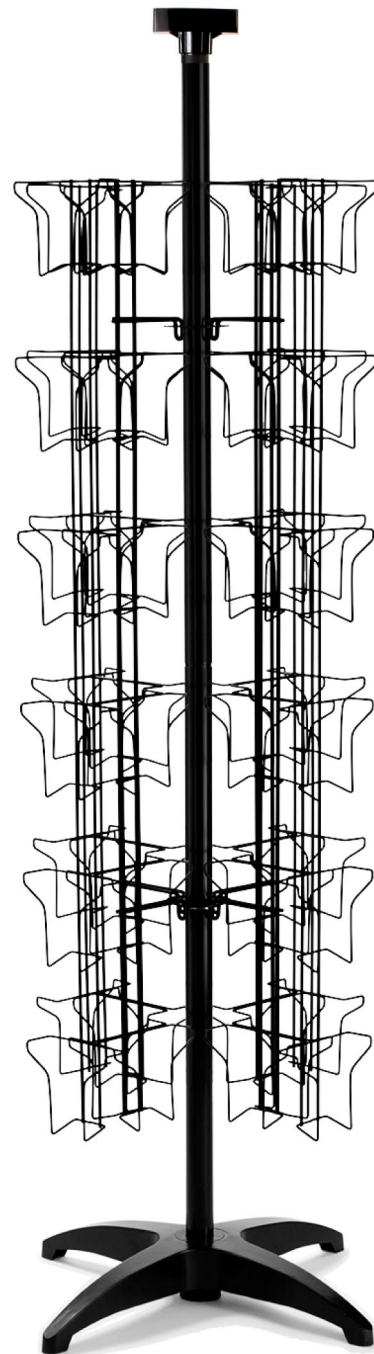


- 1) Greeting card wings (Part G) are shipped nested together. Please separate when unpacking carton.
- 2) Orient the bottom tube (Part D) so that the attached flat washer is near the top. Using a twisting motion, press opposite end into opening in middle of base (Part F). **IMPORTANT:** Use correct tube
- 3) Slide bearing washer (Part E) followed by slotted washer (Part B) down bottom tube (Part D) to rest on attached flat washer.
- 4) Insert swaged (narrower) end of top tube (Part C) in top end of bottom tube (Part D), and press until firmly seated.
- 5) Slide remaining slotted washer (Part B) down top tube (Part C) to rest on pre-welded washer.
- 6) Align slots of both slotted washers. Attach greeting card wings (Part G) to washer slots by using the attached wing hooks, as shown in Detail 1. Repeat for remaining wings.
- 7) Attach sign holder (Part A) to top of display.

**PARTS LIST**

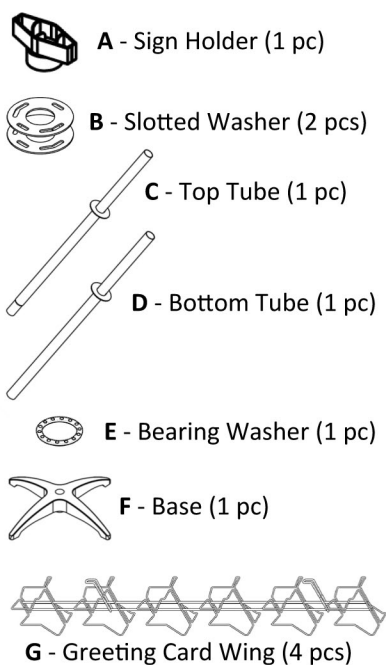

**REETING CARD WING  
PLACEMENT OF HOOKS**

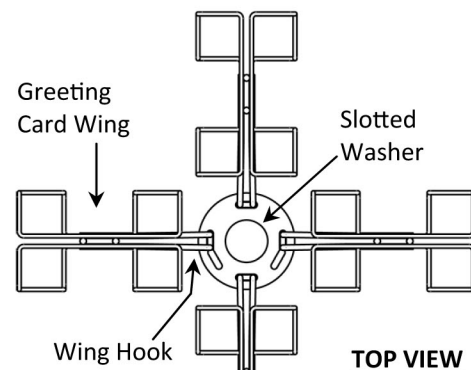

**Detail 1**