


ASSEMBLY INSTRUCTIONS

#3405 with Pro Tips

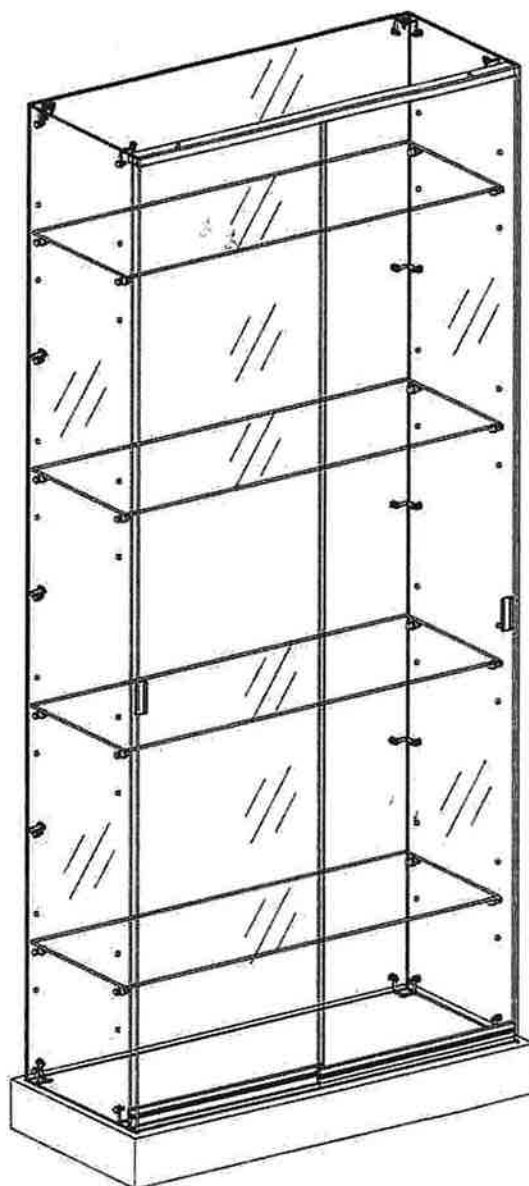

X4



X10



X16




X2




X6

PLEASE NOTE: 2 PERSON ASSEMBLY REQUIRED

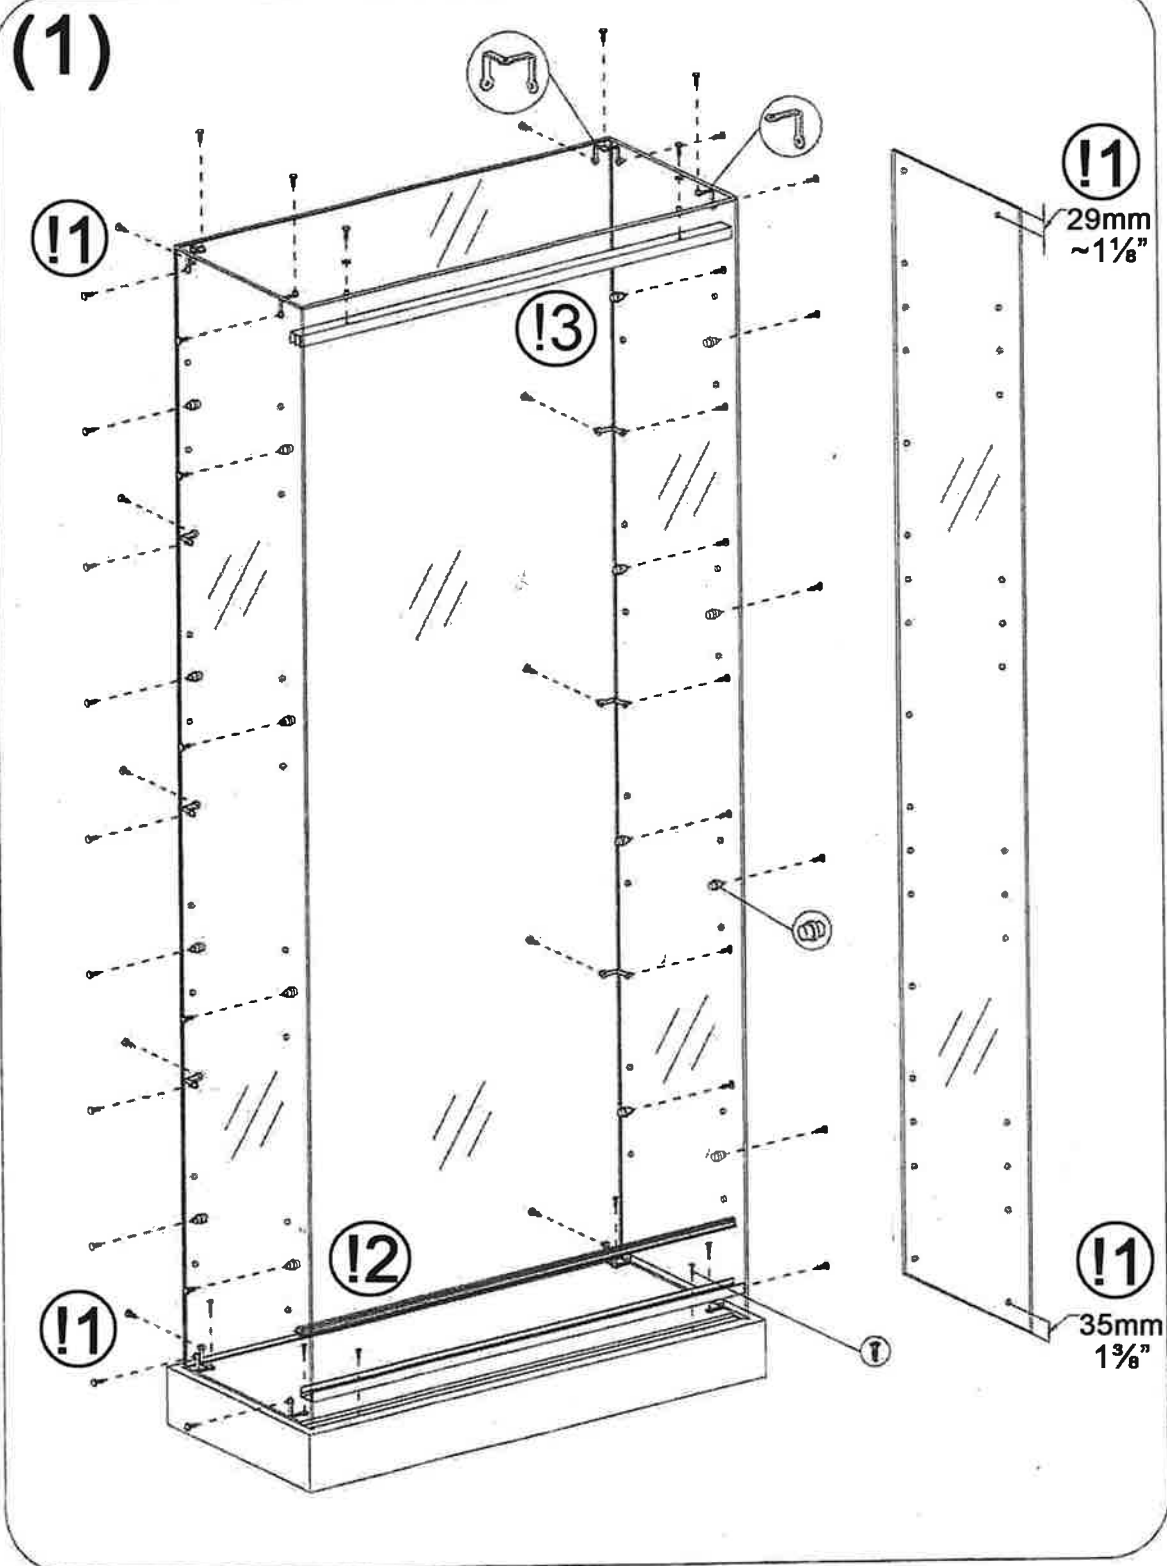

! Pro Tips

1. Back panel and two side panels need to be assembled with shorter hole distance of 29mm at the top and 35mm at the bottom.
2. Screw bottom front opening u-channel into base and then snap track into u-channel.
3. When installing the top u-channel use the 2 smallest knurled screws in the hardware pack.

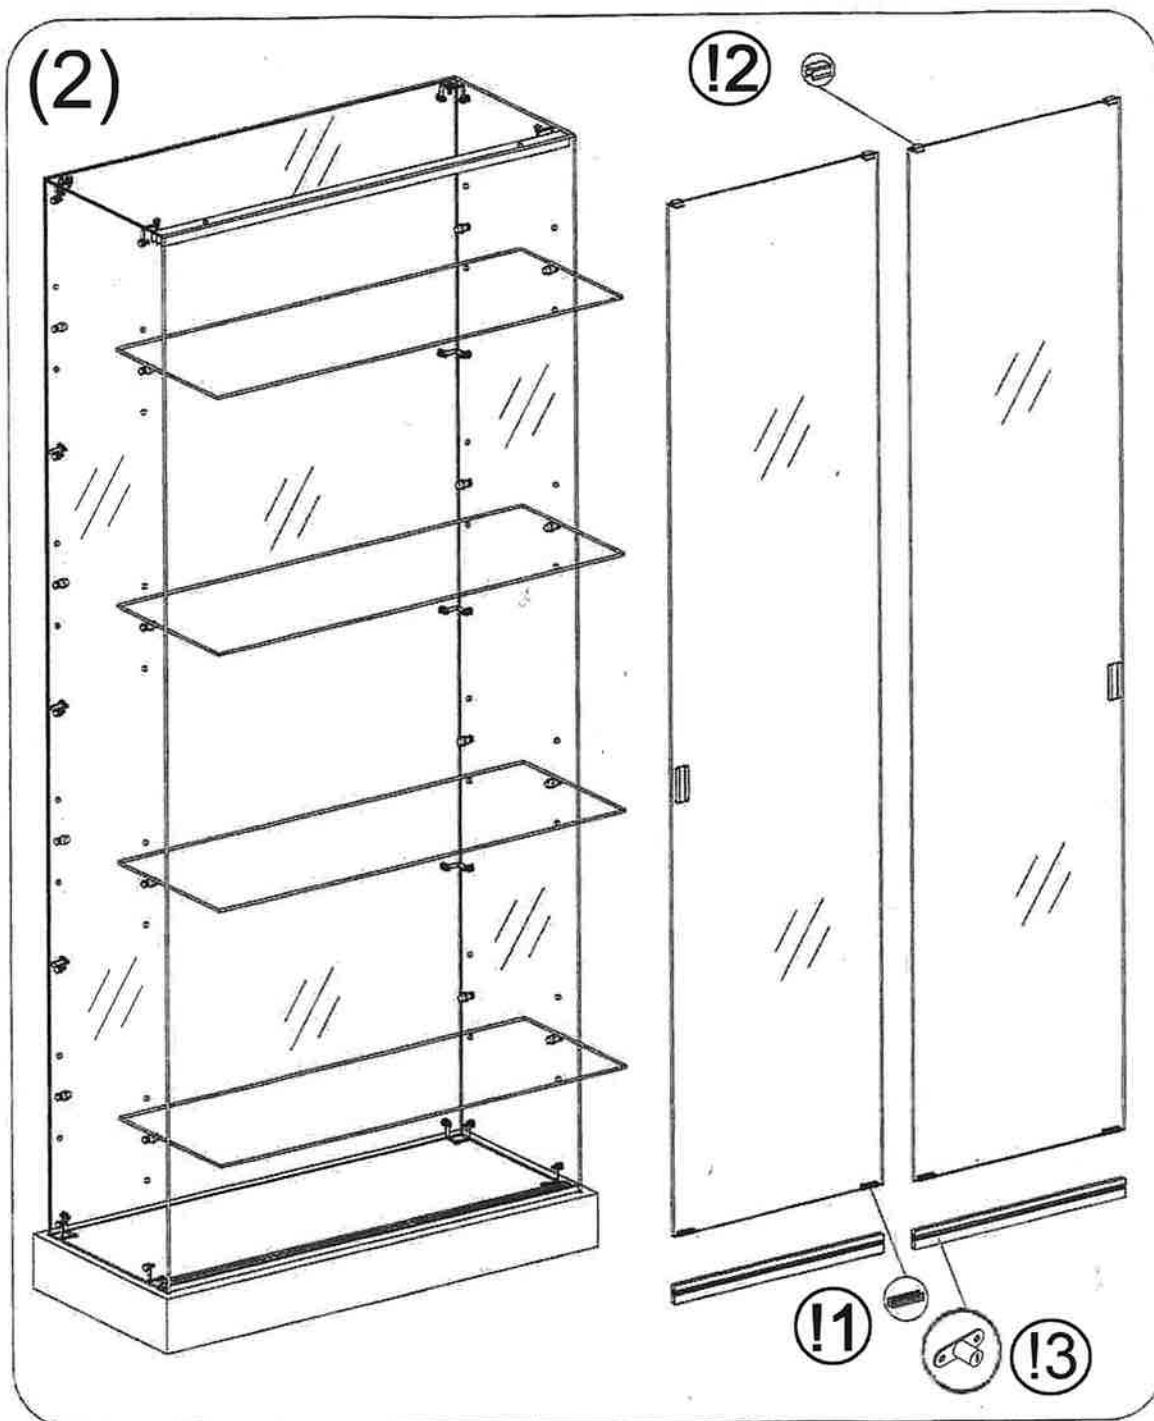

! Pro Tips

1. Use the dark grey gasket on the bottom door glass before inserting glass into the aluminum door channel.
2. Use the light grey u-shaped vinyl on top of door glass.
3. Install plunger lock from the backside of the door channel.

Note: Both casters and levelers are provided. Choose one of the two options.