


ASSEMBLY INSTRUCTIONS FOR K/D CUBE

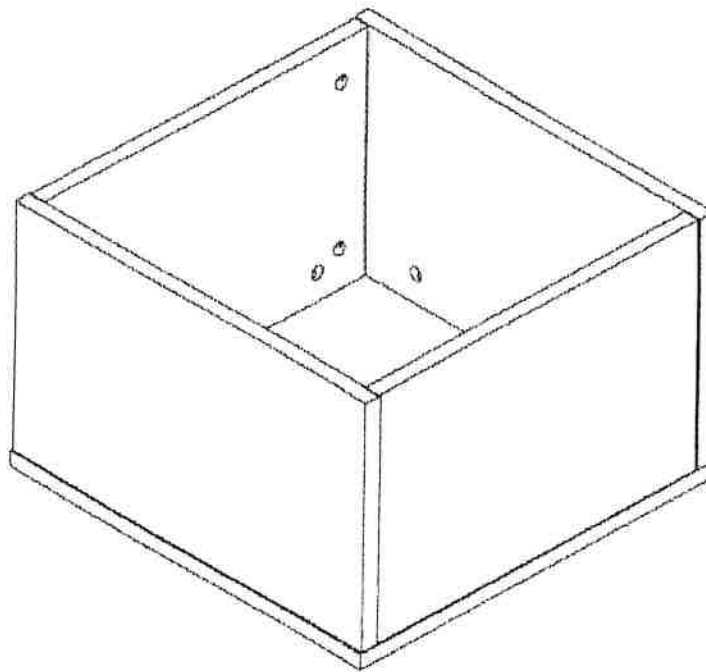

PALAY DISPLAY INDUSTRIES, INC.


10901 Louisiana Avenue South

Bloomington, MN 55438

800-446-6106

www.palaydisplay.com

ILLUSTRATED PARTS

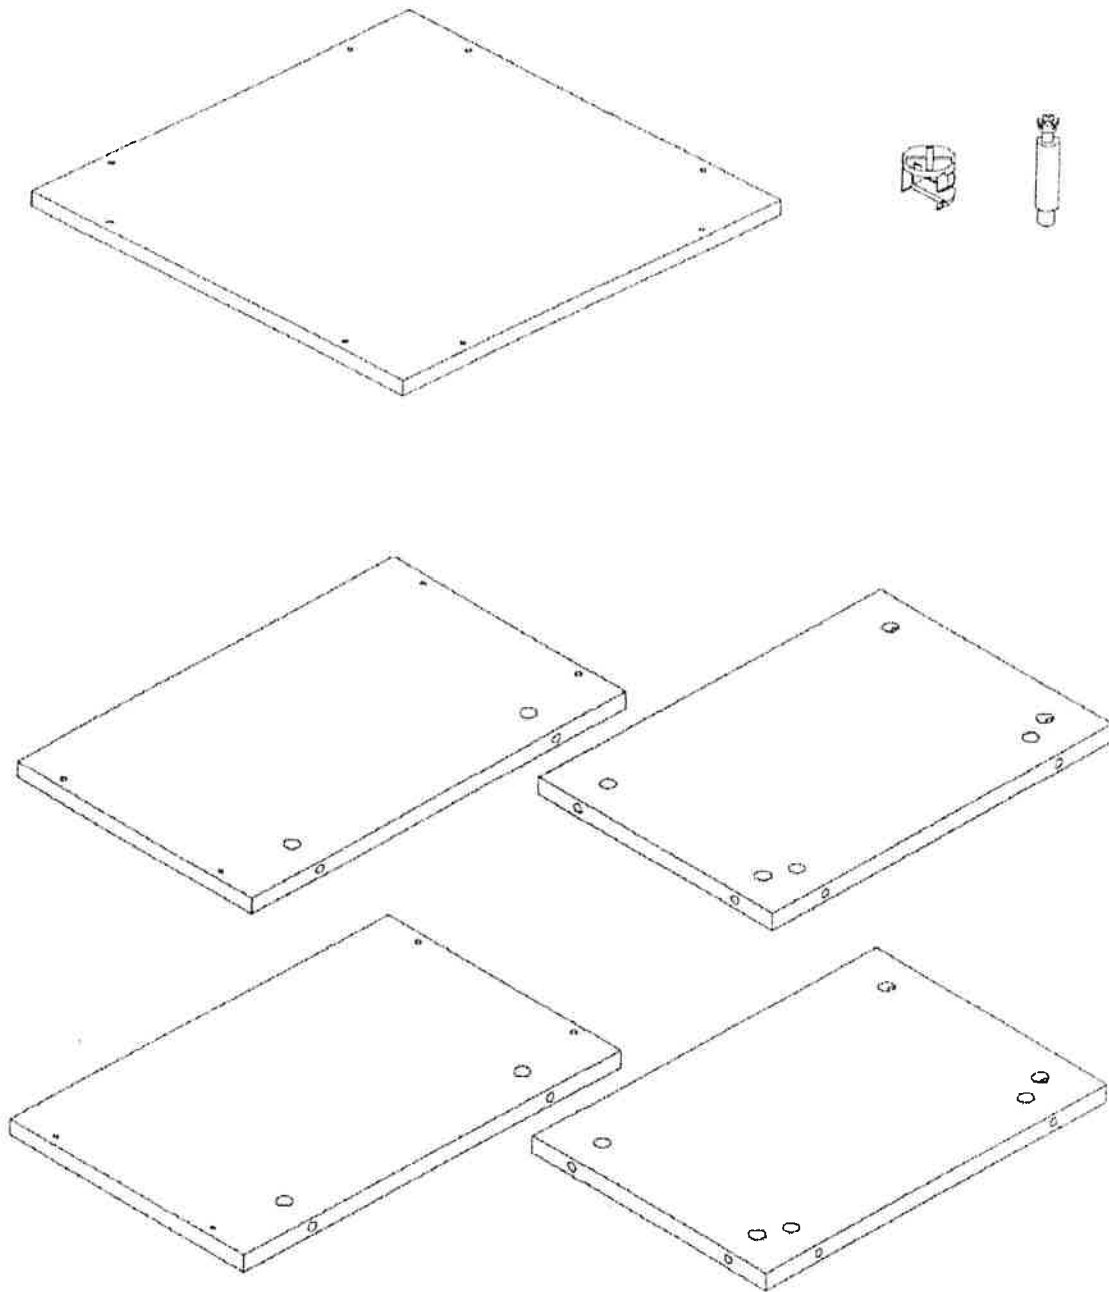



PALAY DISPLAY INDUSTRIES, INC.

10901 Louisiana Avenue South


Bloomington, MN 55438

800-446-6106

www.palaydisplay.com

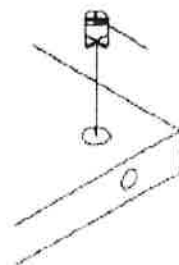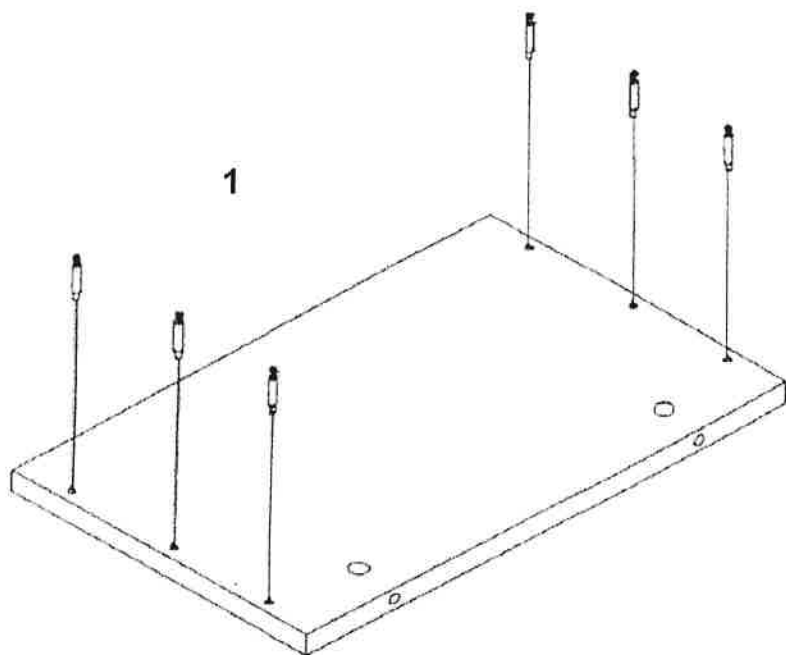

When placing the 15MM twist cams into respective holes, make sure the arrow on top of the cam is pointed towards the edge of the panel, so that the metal cam pin can feed into the horizontal hole. Insert all twist cams into all receiver holes before start of assembly.

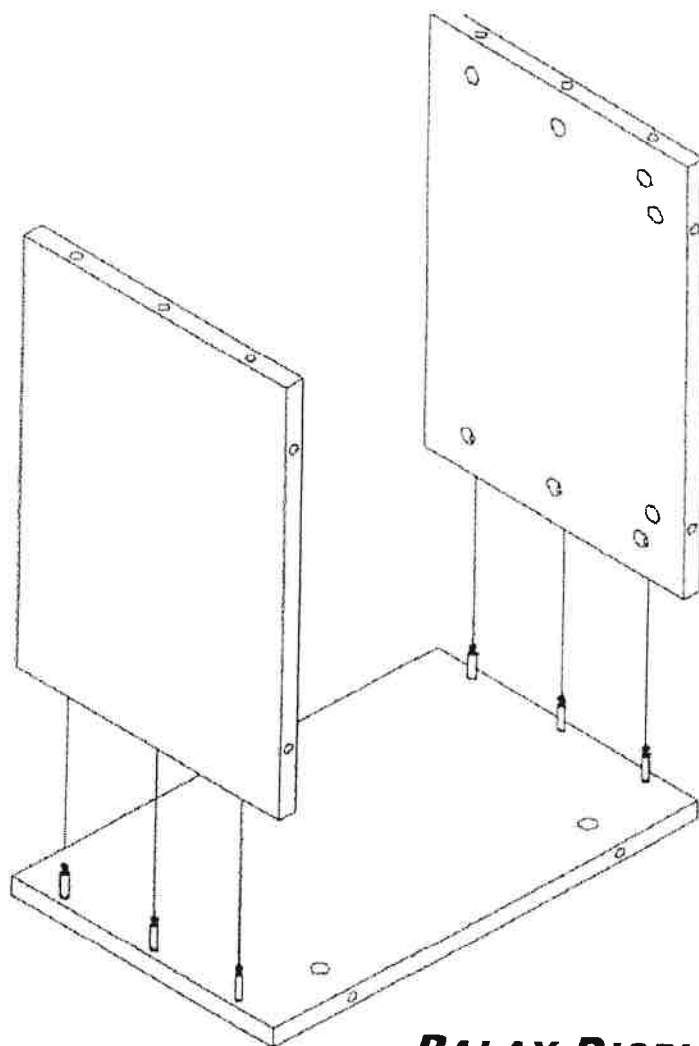


PALAY DISPLAY INDUSTRIES, INC.

10901 Louisiana Avenue South


Bloomington, MN 55438

800-446-6106


www.palaydisplay.com

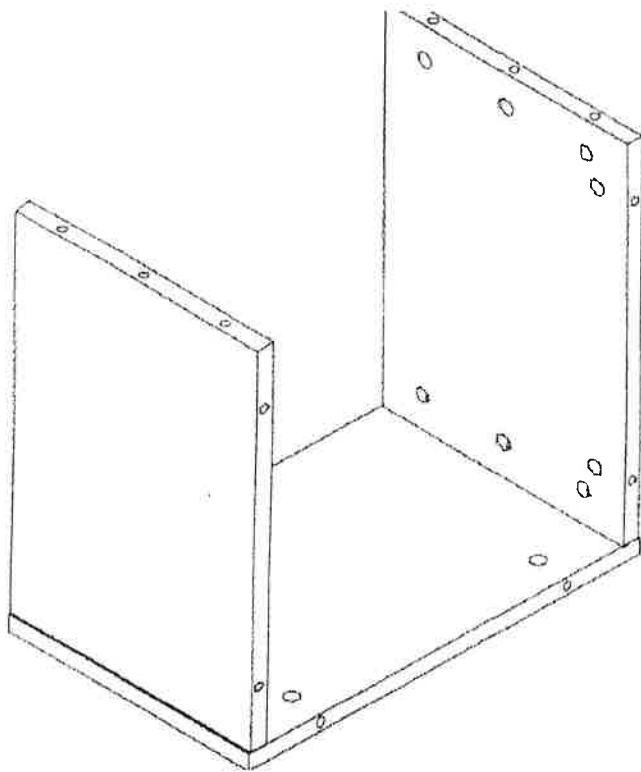

3

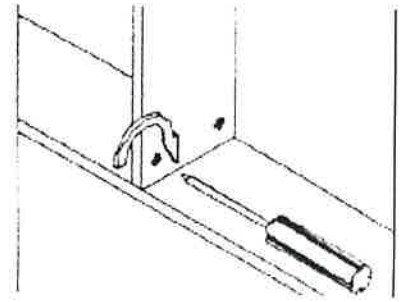

Using the screwdriver, turn the twist cam in a clockwise motion to secure the panels together as shown above.

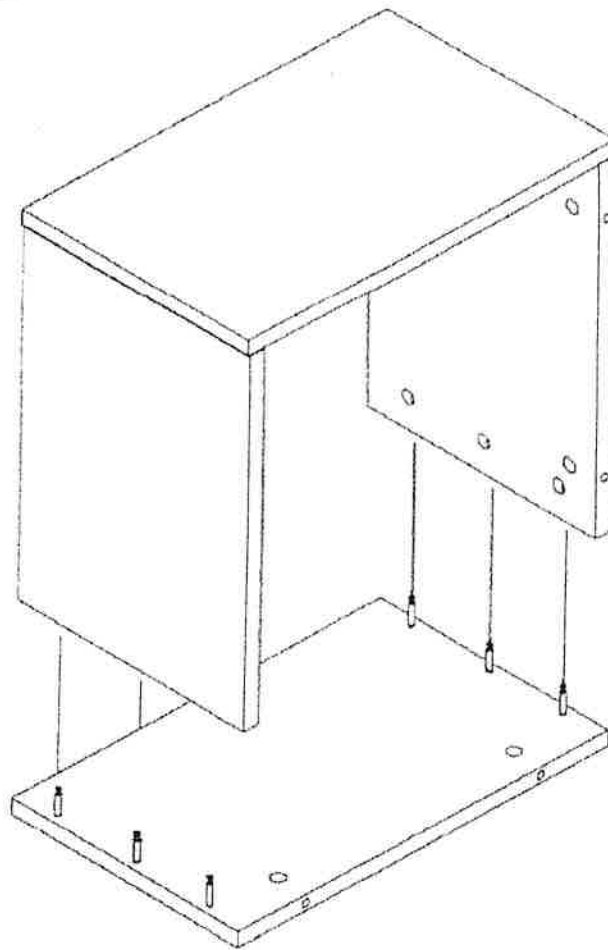

4




PALAY DISPLAY INDUSTRIES, INC.

10901 Louisiana Avenue South


Bloomington, MN 55438

800-446-6106

www.palaydisplay.com

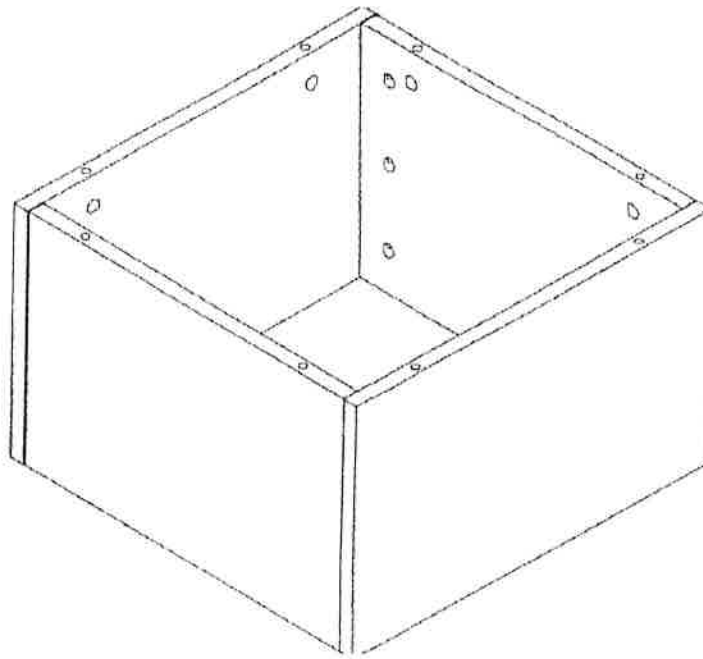

5

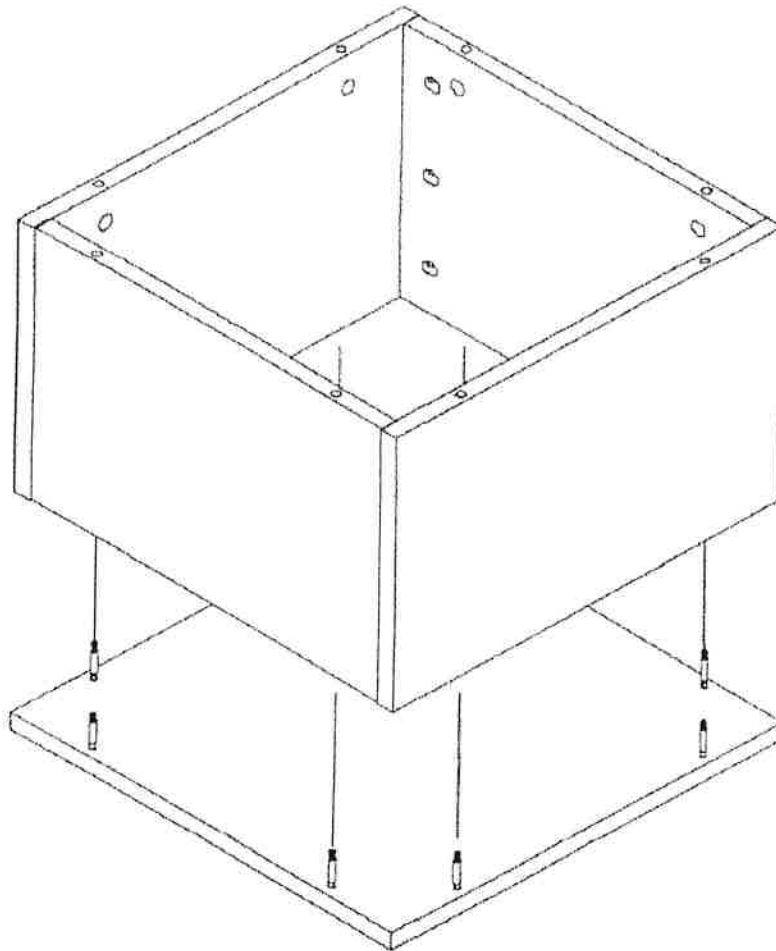

PALAY DISPLAY INDUSTRIES, INC.

10901 Louisiana Avenue South

Bloomington, MN 55438

800-446-6106

www.palaydisplay.com