

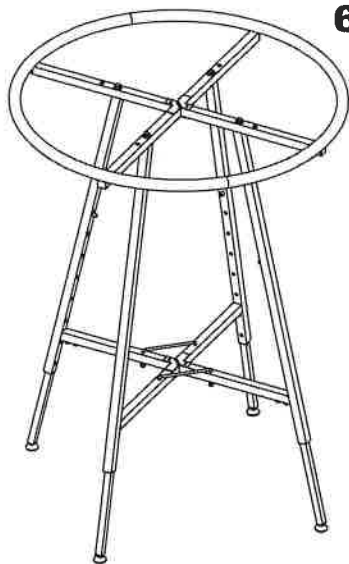
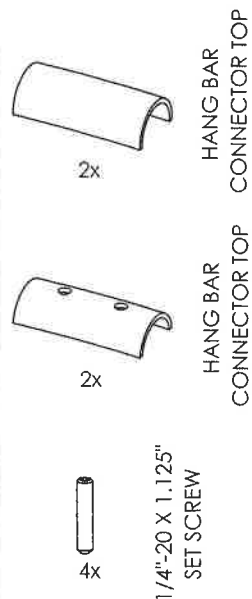


## ASSEMBLY INSTRUCTIONS: 6049KD and 6050KD

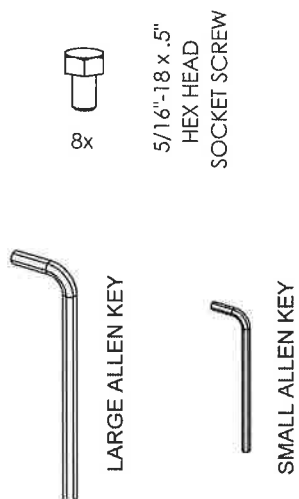


### INCLUDED HARDWARE

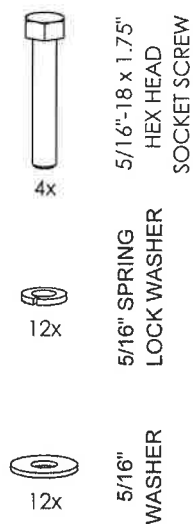


### 1a

UNFOLD THE LOWER X-BRACE. THIS BRACE WILL BE SMALLER AND HAVE SUPPORT WIRES ATTACHED.

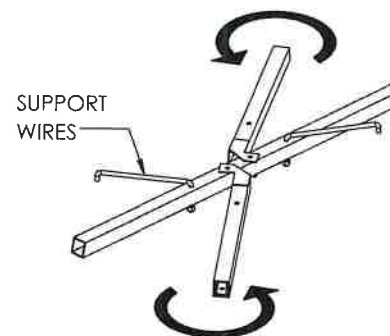


### 1b

PULL UP ON THE SUPPORT WIRES AND INSERT THE END INTO THE HOLE ON THE ADJACENT TUBE.

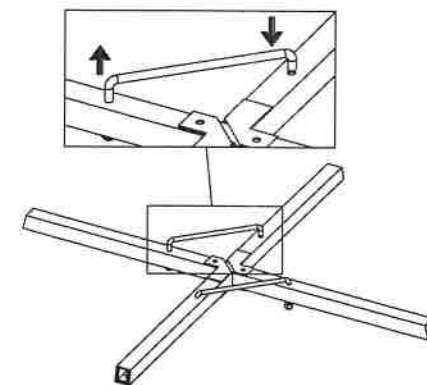


### 2a

ATTACH THE LOWER LEGS TO THE LOWER X-BRACE WITH FLAT WASHERS, LOCK WASHERS, AND THE SHORT HEX HEAD SCREWS AS SHOWN.

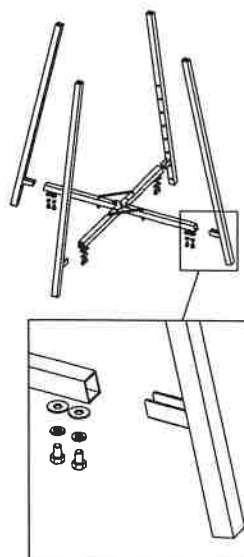

### 2b


UNFOLD THE UPPER X-BRACE AND SECURE TO THE LOWER LEGS WITH FLAT WASHERS, LOCK WASHERS, AND THE LONG HEX HEAD SCREWS AS SHOWN.

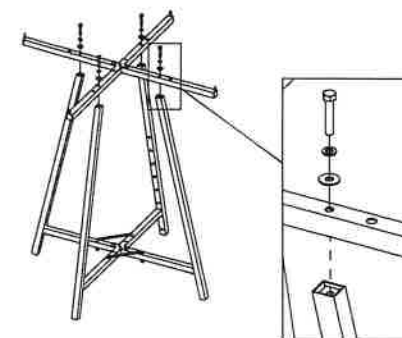


3



- FLIP OVER THE ASSEMBLY FROM THE PREVIOUS STEP. INSTALL THE ADJUSTABLE LEGS BY DEPRESSING THE PUSH BUTTONS AND INSERTING THEM INTO THE LOWER LEGS.
- IF THEY ARE NOT ALREADY INSTALLED, SCREW THE LEVELERS ONTO THE ADJUSTABLE LEGS.
- THE COMPLETED FRAME CAN BE FLIPPED RIGHT SIDE UP.

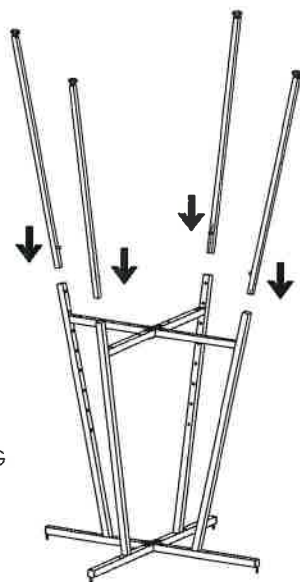


4

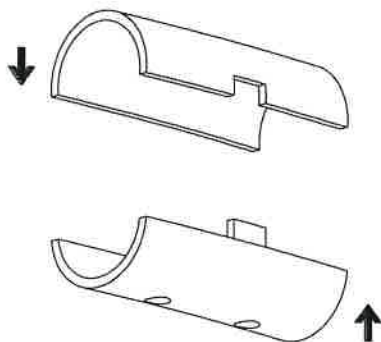


- TAKE A HANG BAR CONNECTOR TOP AND BOTTOM AND JOIN THEM TOGETHER SO THE TAB IS INSERTED INTO THE NOTCH.
- **NOTE: THEY ARE NOT MEANT TO LOCK TOGETHER.**

5

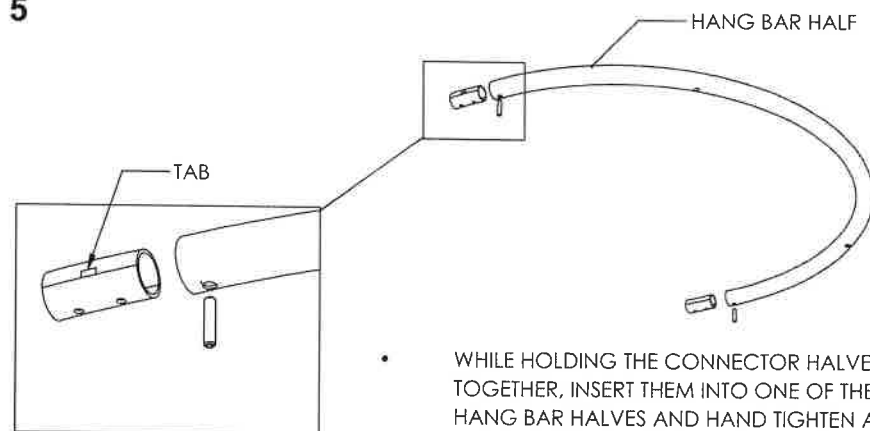


- WHILE HOLDING THE CONNECTOR HALVES TOGETHER, INSERT THEM INTO ONE OF THE HANG BAR HALVES AND HAND TIGHTEN A SET SCREW SO IT STAYS IN PLACE.
- REPEAT FOR THE OTHER CONNECTOR.
- **NOTE: THE CONNECTOR MUST BE INSERTED SO THE TAB IS FACING OUT. THIS WILL ENSURE THE CURVE OF THE CONNECTOR FOLLOWS THE CURVE OF THE HANG BAR.**

6

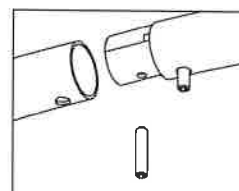

CLEARANCE HOLES

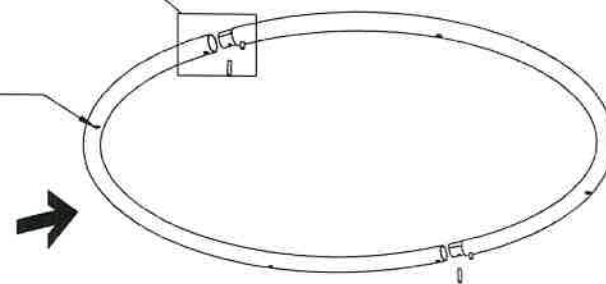

- SLEEVE THE REMAINING HANG BAR HALF ONTO THE EXPOSED CONNECTORS AND HAND TIGHTEN THE REMAINING SET SCREWS TO SECURE.
- ONCE ALL 4 SET SCREWS HAVE BEEN STARTED, TIGHTEN WITH THE SMALL ALLEN KEY UNTIL THE HANG BAR FEELS RIGID AND NO SET SCREW IS EXPOSED.
- INSTALL THE ASSEMBLED HANG BAR ONTO THE ASSEMBLED FRAME BY INSERTING THE THUMBNAIls ON THE UPPER X-BRACE INTO THE CLEARANCE HOLES.