


Assembly Instructions for Countertop Clothing Form - 9343



1. Install screw and nut into hang hook hole of form.

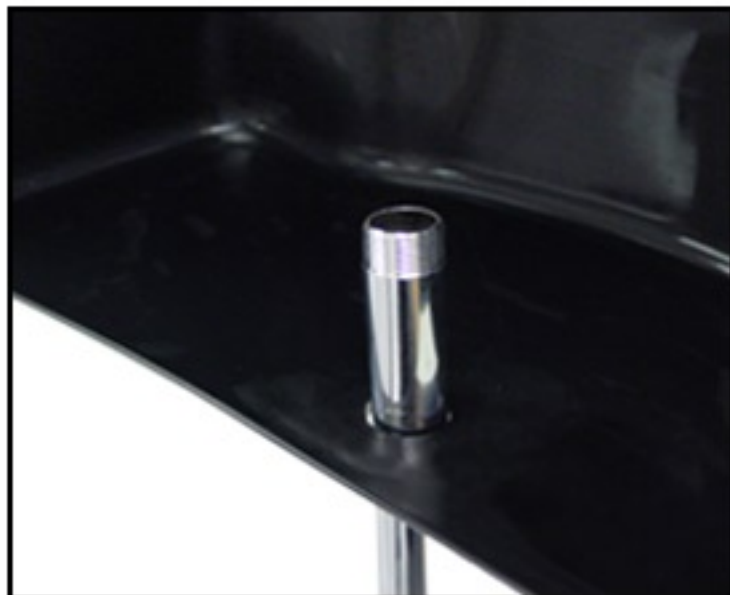

2. Assemble base and upright, and slide form onto upright.



3. Set screw into top of upright pole.



PDi

PALAY DISPLAY INDUSTRIES

10901 Louisiana Ave. S. Bloomington, MN 55438 • www.palaydisplay.com • 800-446-6106